

1/11

FIG. 1A

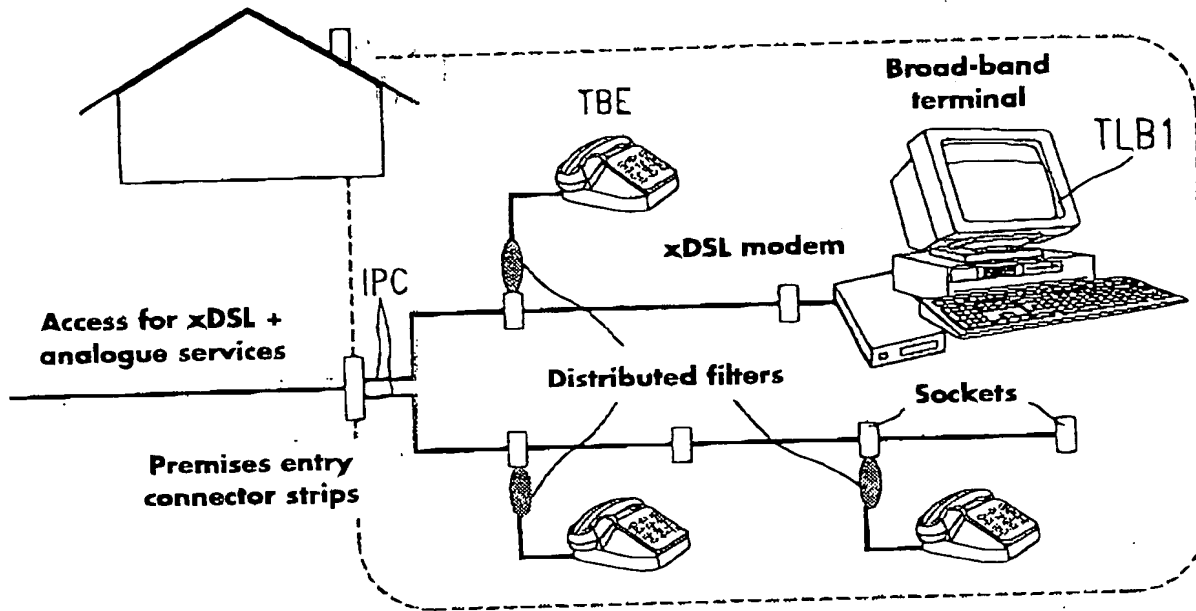


FIG. 1B


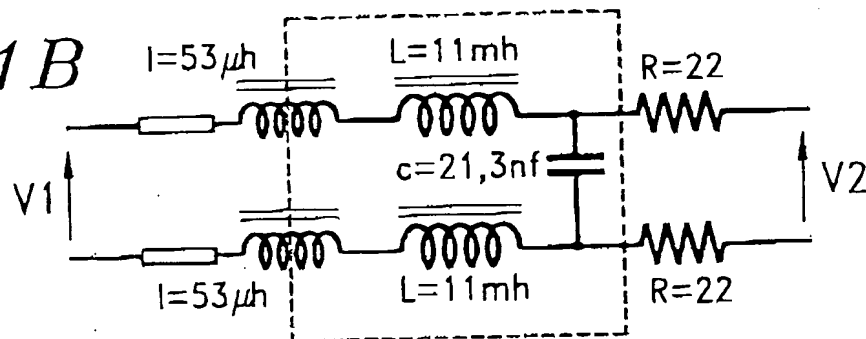


FIG. 2A

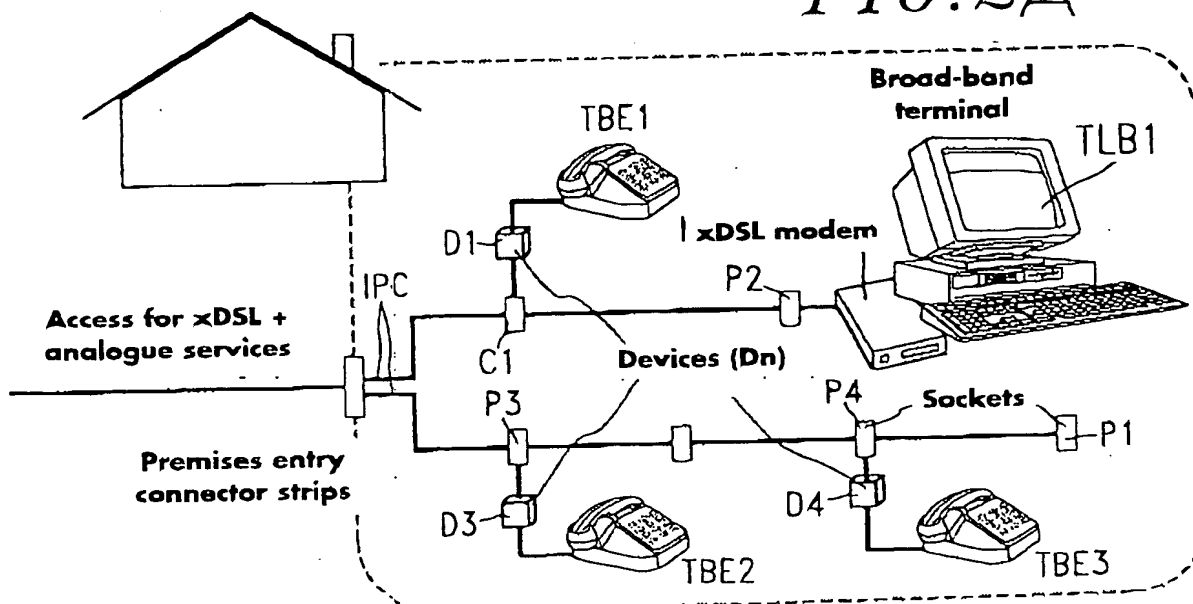

2/11

FIG. 2B

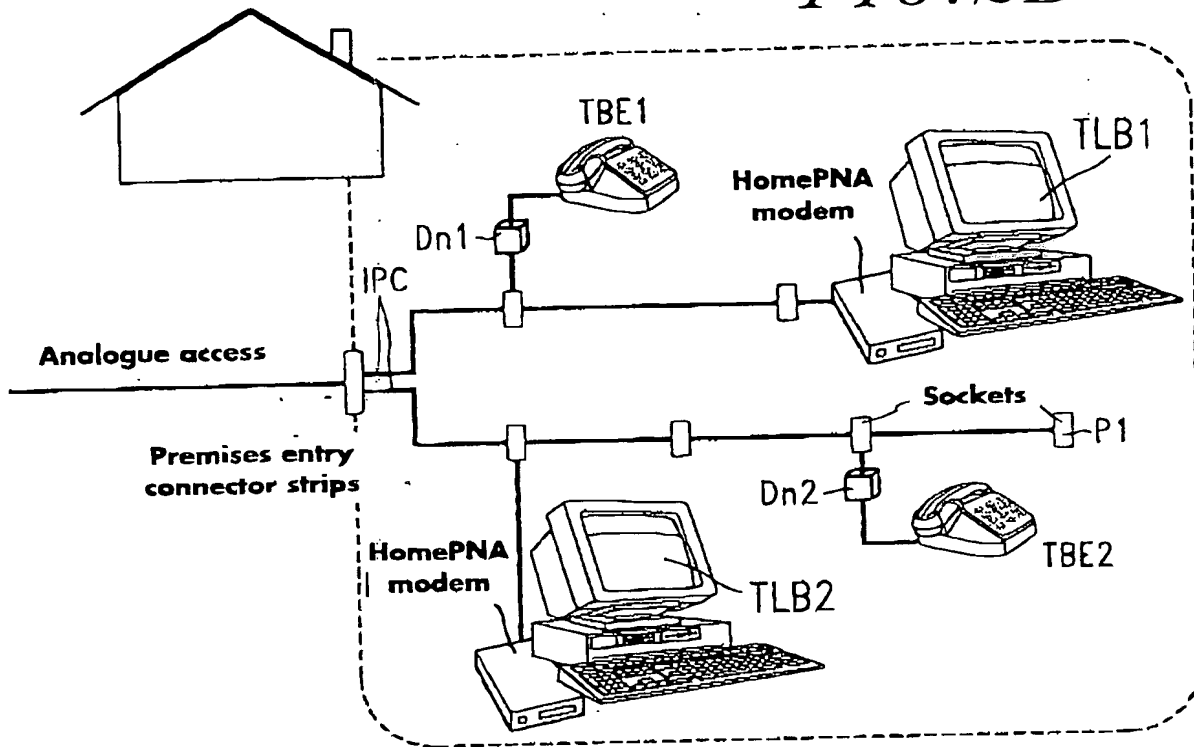


FIG. 3A


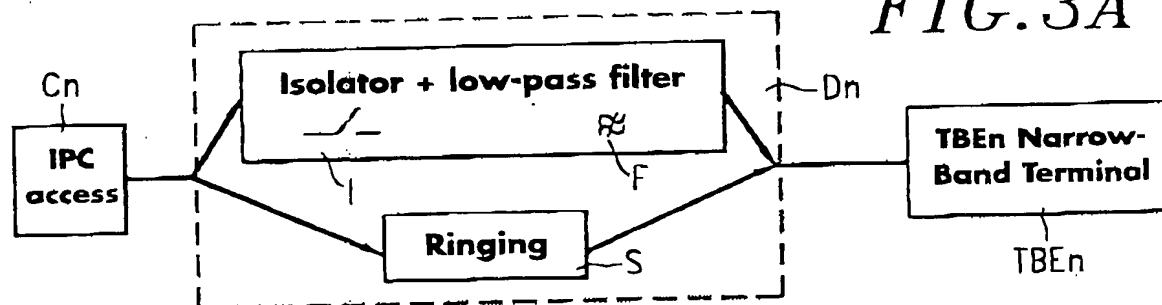


FIG. 3B

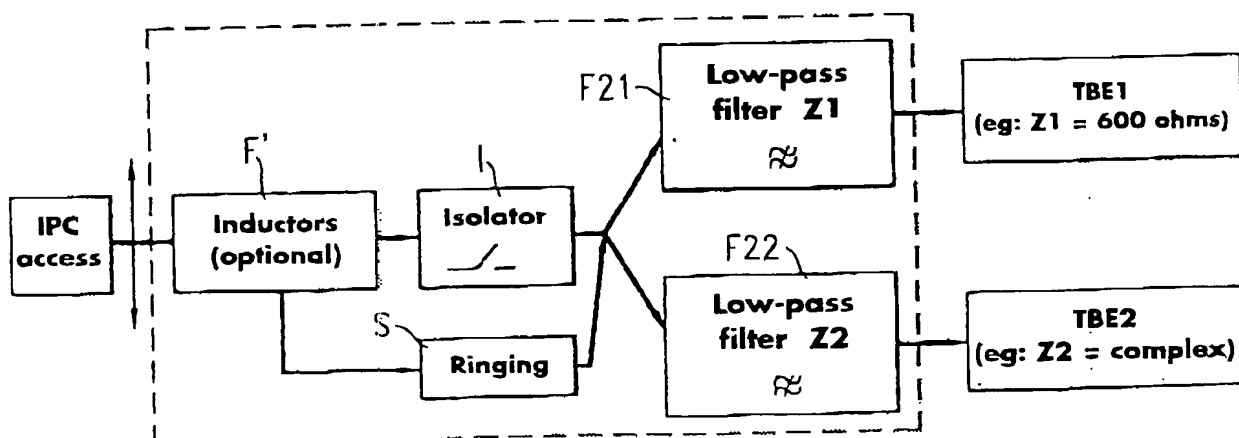

3/11

FIG. 4


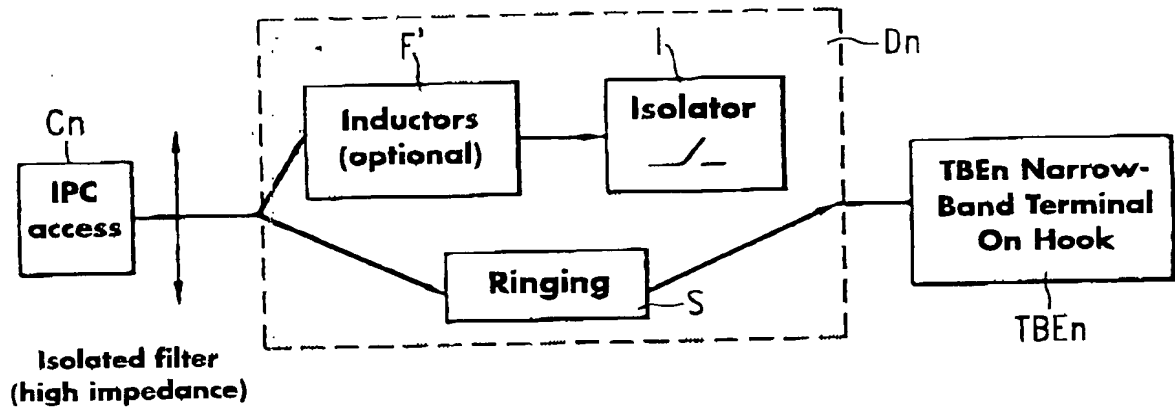


FIG. 5

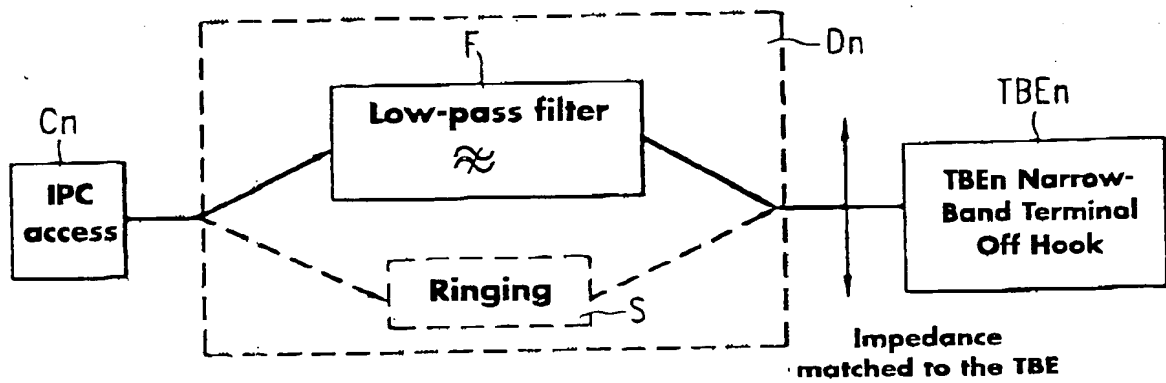

4/11

FIG. 6


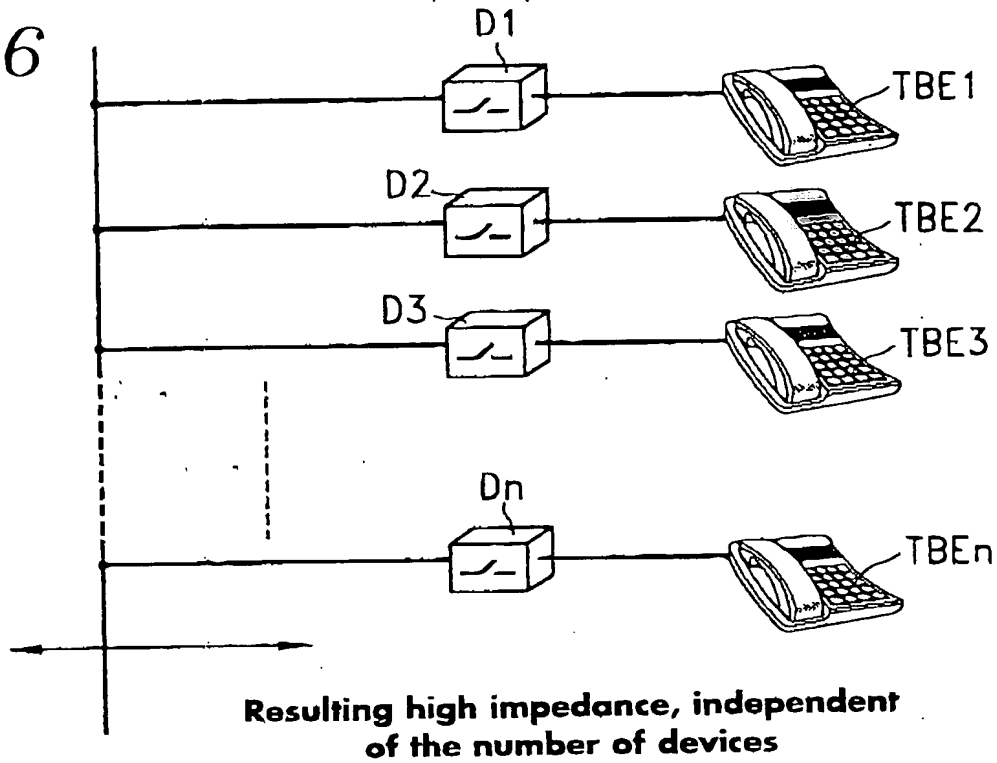


FIG. 7

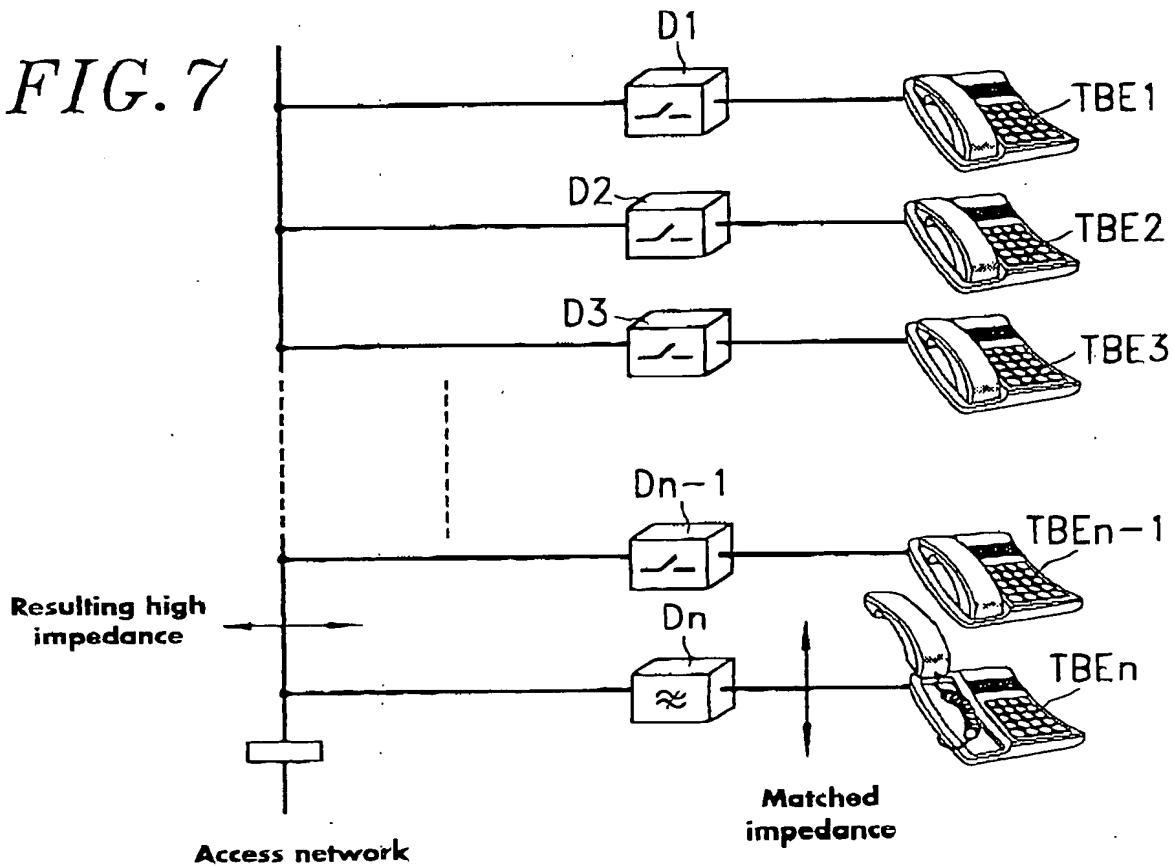

5/11

FIG. 8A


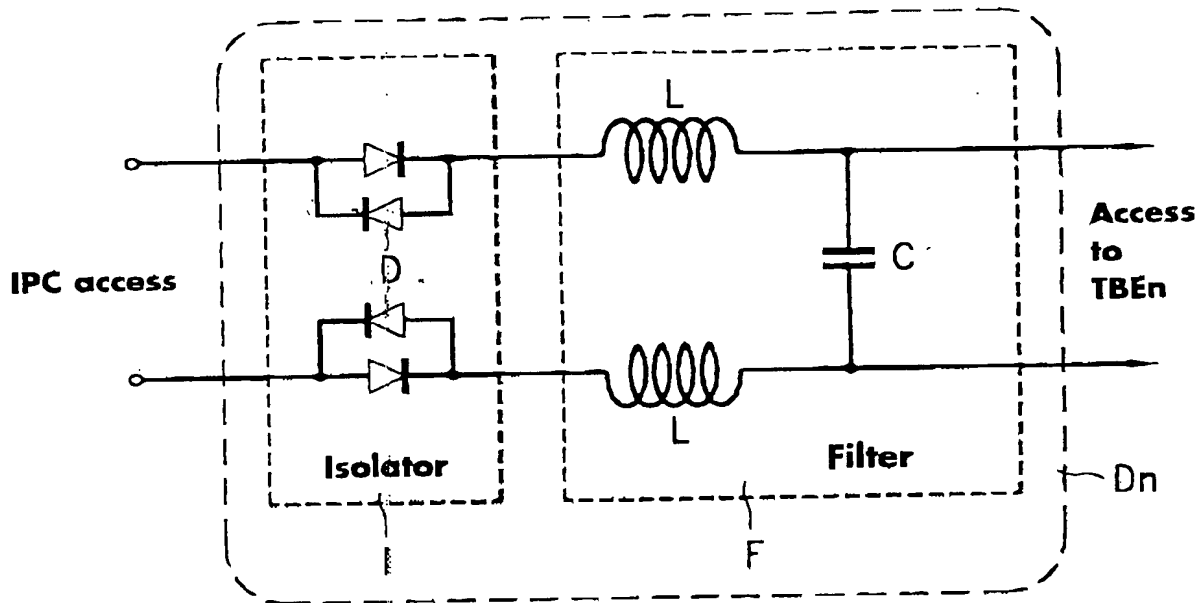


FIG. 8B

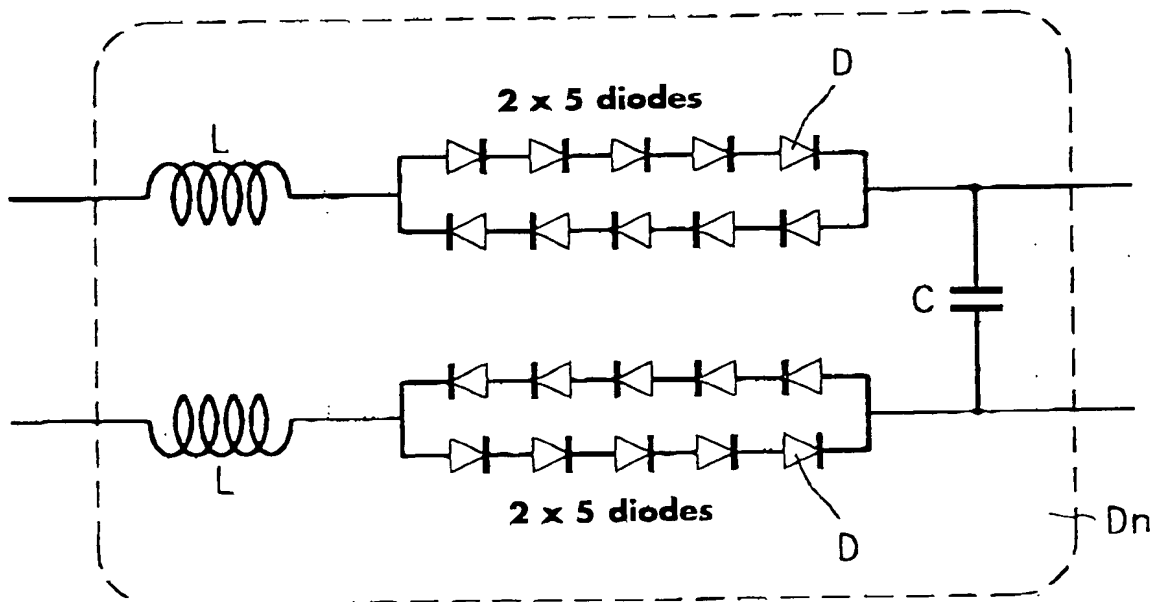

6/11

FIG. 9



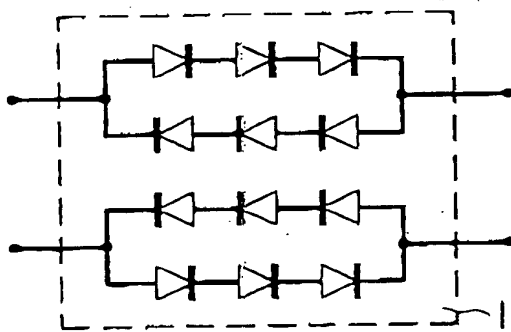


FIG. 10

FIG. 11A

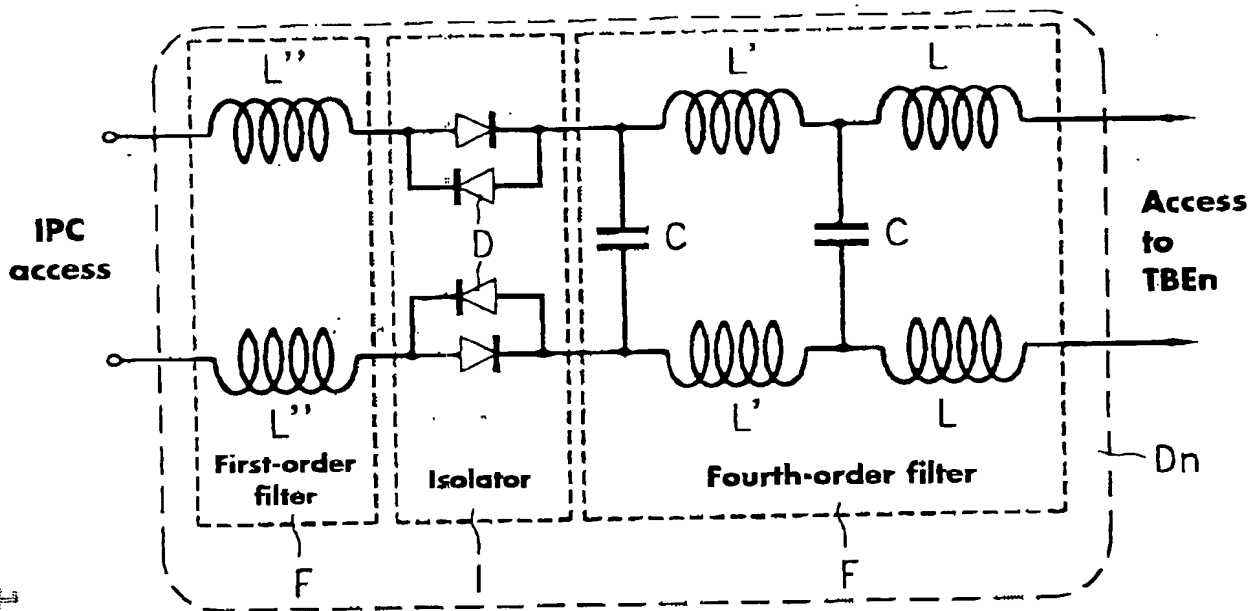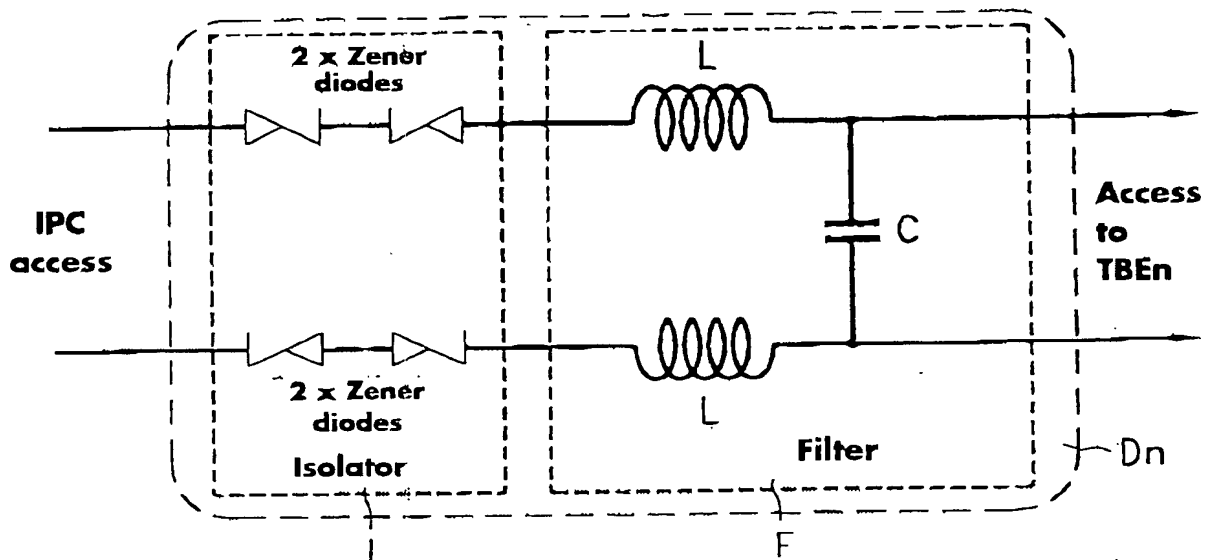

7/11

FIG. 11B

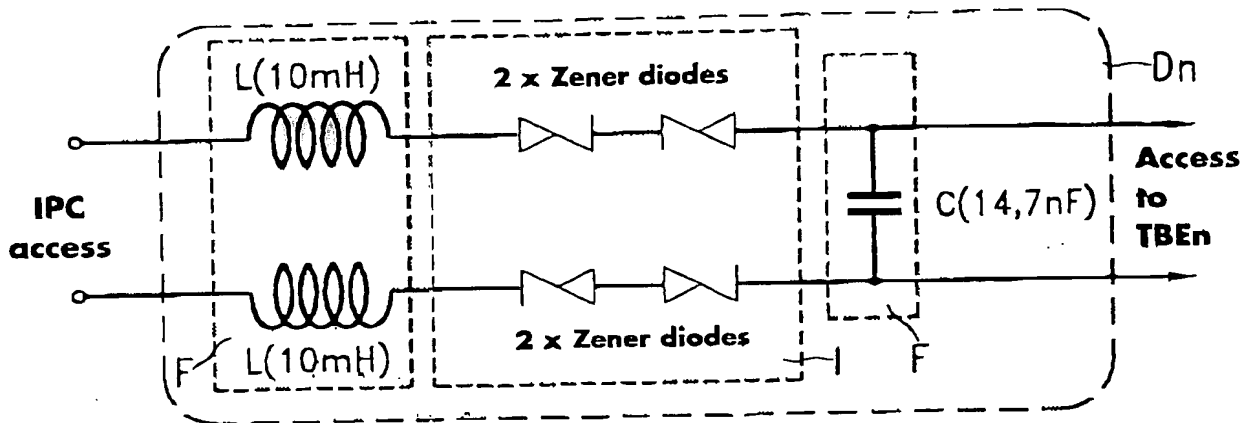


FIG. 12


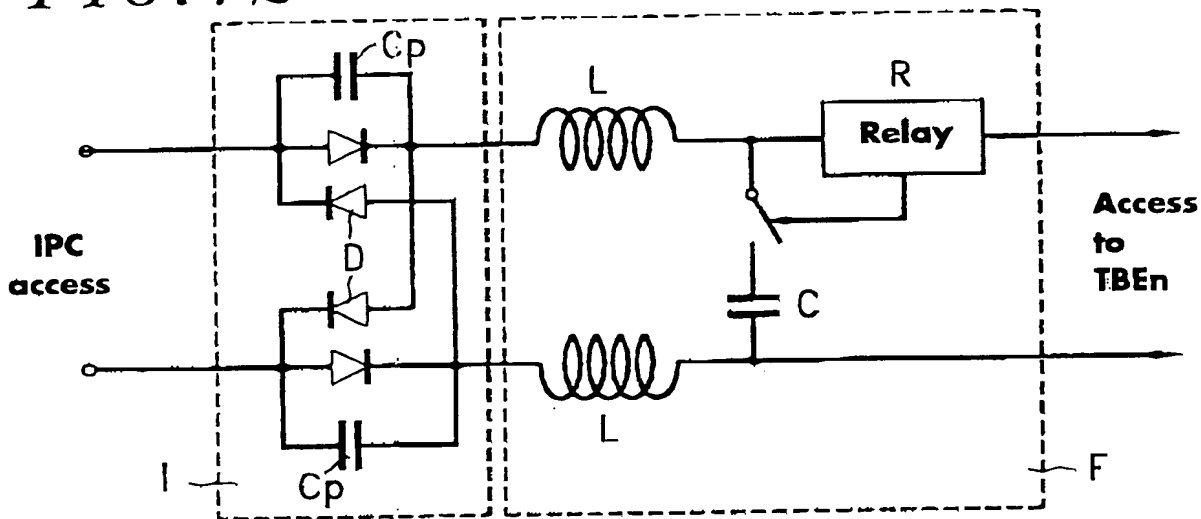


FIG. 17

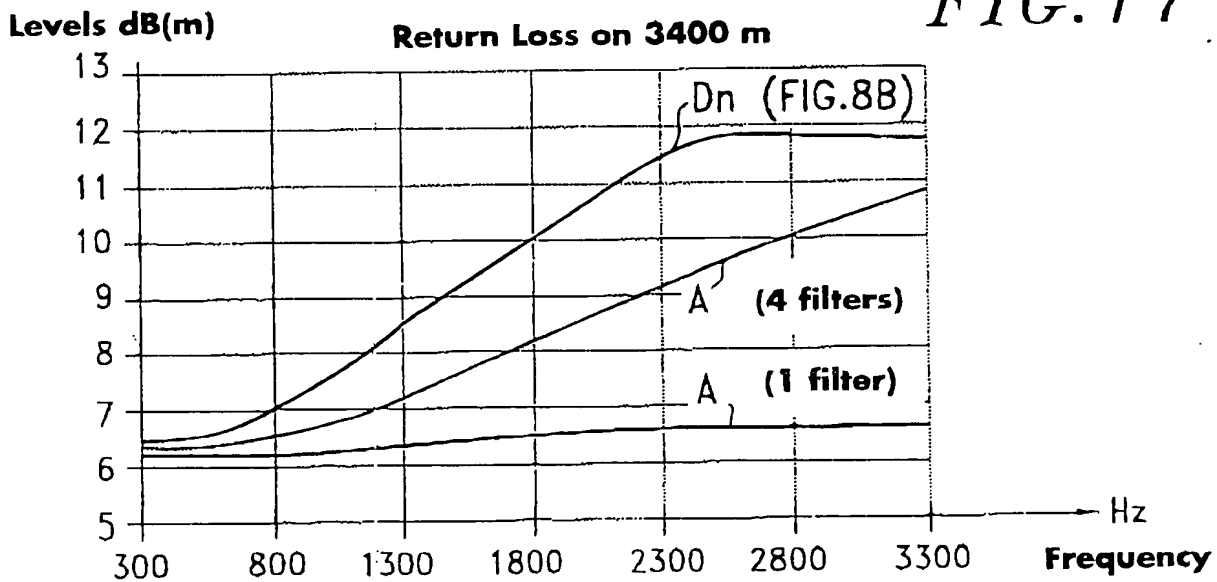

8/11

FIG. 13

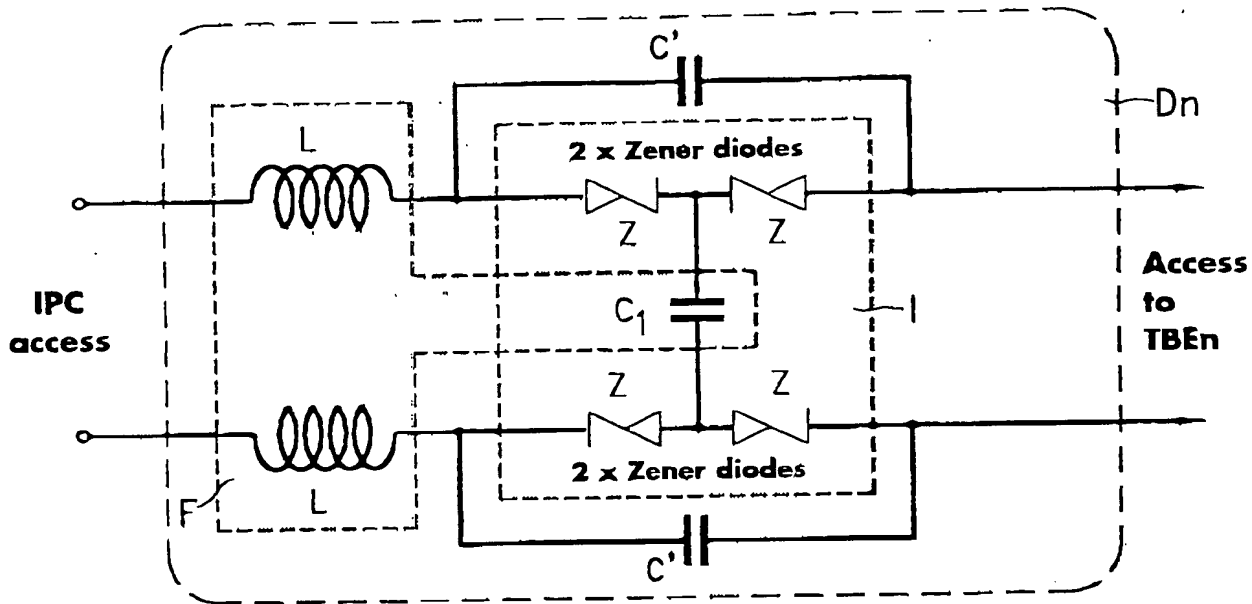


FIG. 14

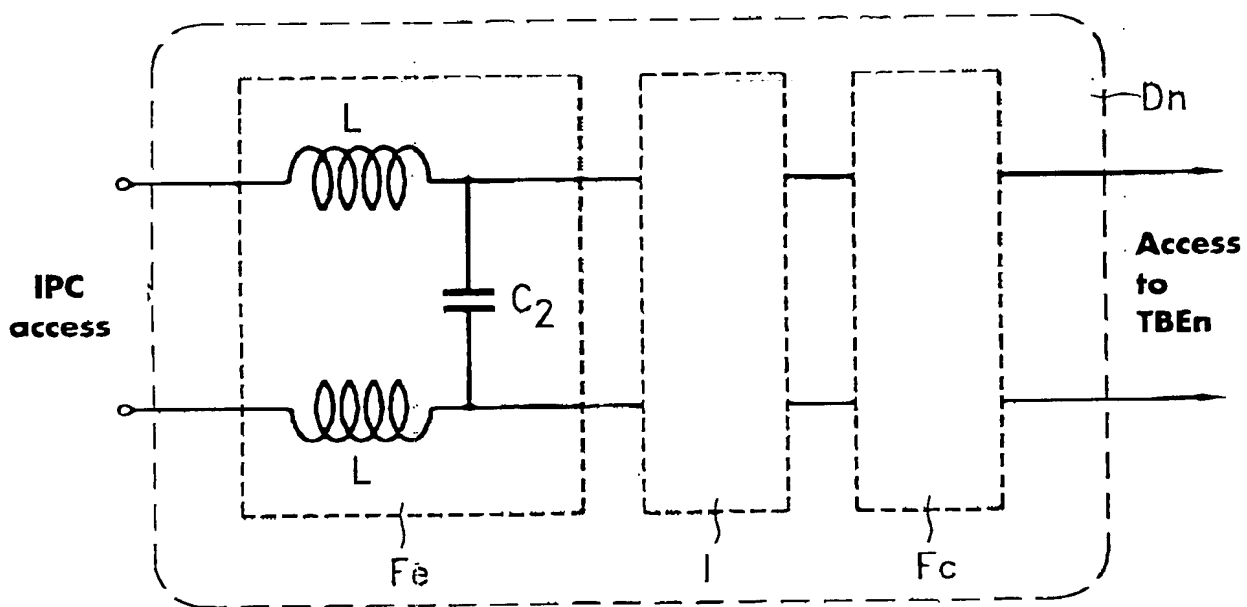


FIG. 13



9/11

FIG. 15


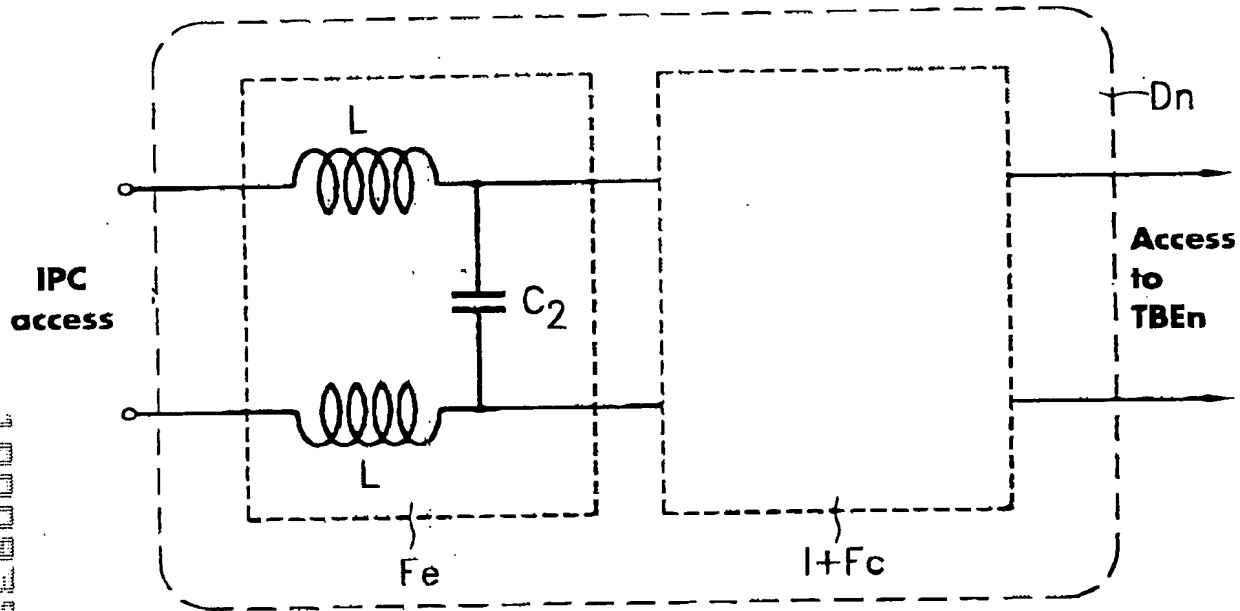


FIG. 16

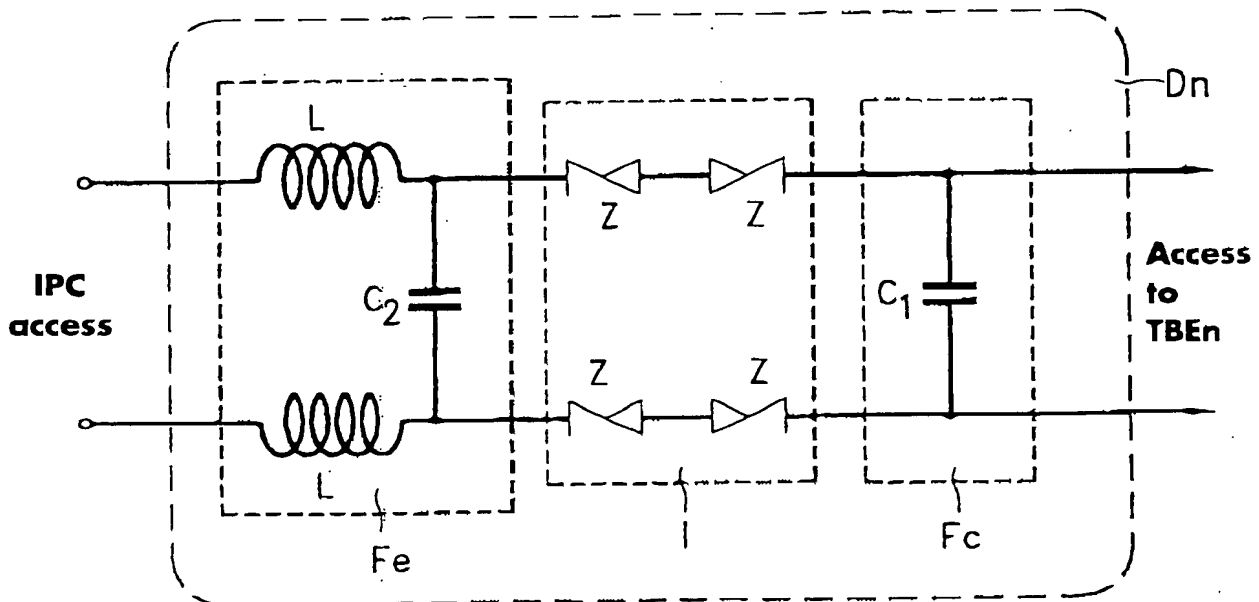

10/11

FIG. 18

Impedances in ohms


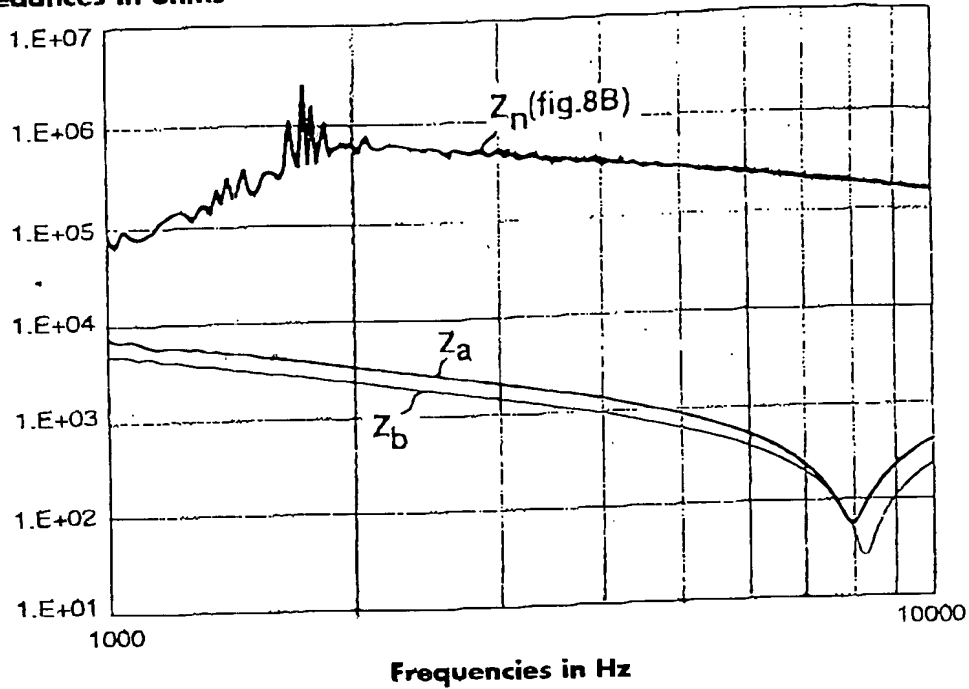


FIG. 19


0-10 kHz band Handset off hook (2 filters)

Levels dB(M)

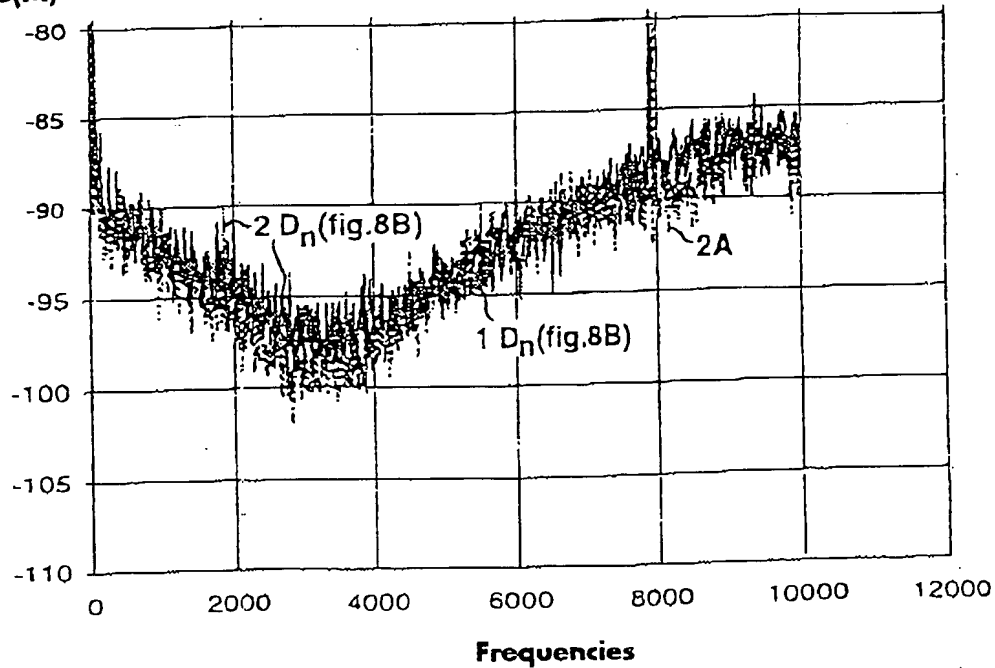

11/11

FIG. 20

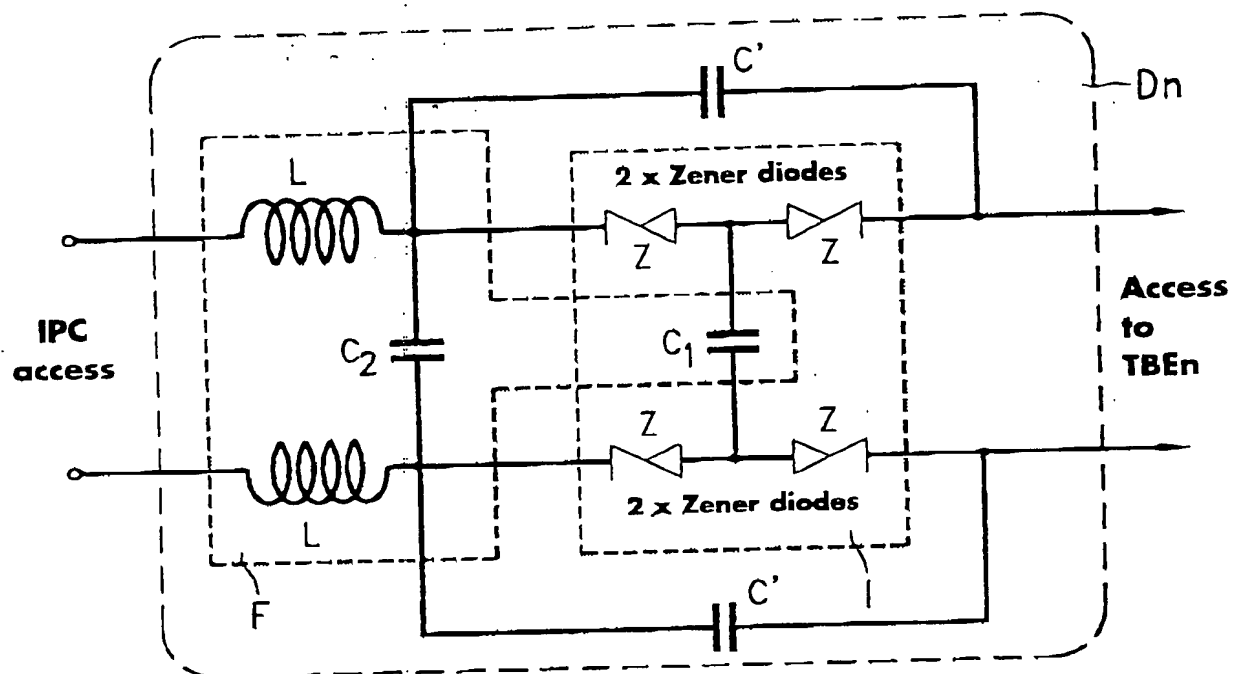

E20T00" 86E600T